AEG AUS ERFAHRUNG GUT

SMART 300/301/306/350/360/366

Bodenstaubsauger	Gebrauchsanweisung
Vacuum Cleaner	Operating Instructions
Aspirateur traîneau	Mode d'emploi
Aspirapolvere	Instruzioni per l'uso
Vloerstofzuiger	Gebruiksaanwijzing
Aspirado de polvo	Instrucciones de uso
Aspirador	Instruções de utiliyação
Elektrikli süpürge	Kullanma talimatları
Ηλεκτρική σκούπα	Οδηγίες χρήσεως

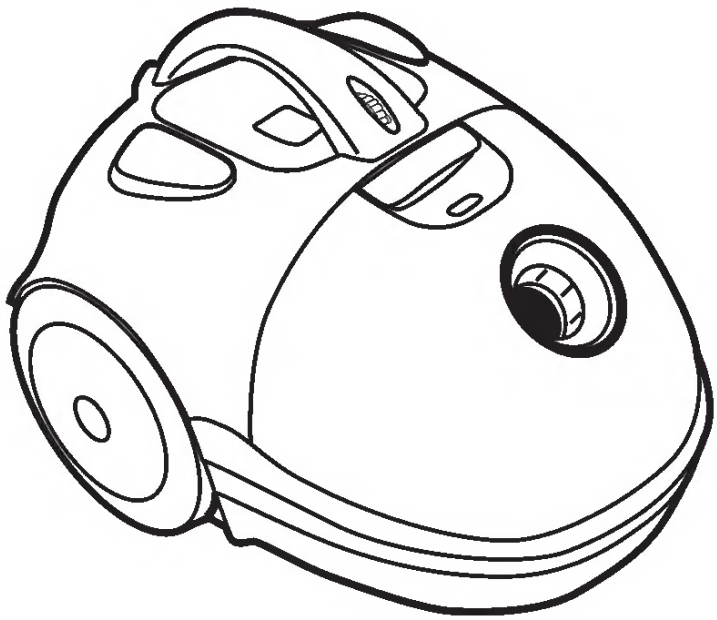

Downloaded from www.Manualslib.com manuals search engine

Ausstattung 7
Zubehör 7
Sicherheitshinweise 7
Inbetriebnahme 8
Die besten Ergebnisse erzielen 8
Wechsel des Staubbeutels 8
Staubbeutelwechselanzeige 8
Wechsel des Staubbeutels 8
Staubbeutel-Sicherheitsvorrichtung 8
Wechsel/Reinigen der Filter 9
Reinigen des Motorschutzfilters 9
Wechsel des Mikrofilters 9
Fehlersuche und -behebung 9

Dear Customer 10
Features 10
Accessories 10
Safety instructions 10
Getting Started 10
Getting the best results 11
Dust bag indicator and changing the dustbag 11
To change the dustbag 11
We recommend the dustbag is changed 11
Changing the filters 11
To clean Motor Protection filter 11
To change Micro filter 12
Troubleshooting 12

Votre Smart posséde les caractéristiques suivantes 13
Les accessoires de votre Smart 13
Assurer votre sécurité 13
Mise en marche 13
Comment obtenir les meilleurs résultats 14
Indicateur de remplissage de sac et changement du sac á poussiére 14
Pour changer le sac á poussiére 14
Nous recommandons de changer le sac á poussiére 14
Changer les filtres 15
Pour nettoyer le filtre de protection du moteur 15
Pour changer le microfiltre 15
Gestion des pannes 15

Le caratteristiche del Smart 16
Accessori dell'aspirapolvere Smart 16
Per la vostra sicurezza 16
Per cominciare 16
Per ottenere i migliori risultati 17
Indicatore di sacchetto pieno e come cambiare il sacchetto 17
Per cambiare il sacchetto 17
Raccomandiamo di cambiare il sacchetto della polvere 17
Cambio dei filtri 18
Diagnosi dei guasti 18

Kenmerken van uw Smart 19
Hulpstukken voor uw Smart 19
Veiligheid voorop 19
Voordat u begint 19
Optimale resultaten 20
De stofzakindicator en het verwisselen van de stofzak 20
Als u de stofzak wilt verwisselen 20
Wij raden u aan om de stofzak vervangen 20
De filters vervangen 21
Het motorbeschermfilter schoonmaken 21
Het Microfilter vervangen 21
Problemen oplossen 21

Estimado cliente 22
Las caracter sticas de su Smart 22
Accesorios para su Smart 22
Para garantizar su seguridad 22
Listo para comenzar 22
C mo obtener los mejores resultados 23
Indicador de llenado de bolsa y cambio de esta 23
Para cambiar la bolsa de recogida de polvo 23
Recomendamos que se cambie la bolsa de recogida de polvo 23
Cambio de los filtros 24
Modo de limpiar el filtro de protecci n de motor 24
Para cambiar el Micro Filtro 24
Reparaci n de aver as 24

Downloaded from www.Manualslib.com manuals search engine

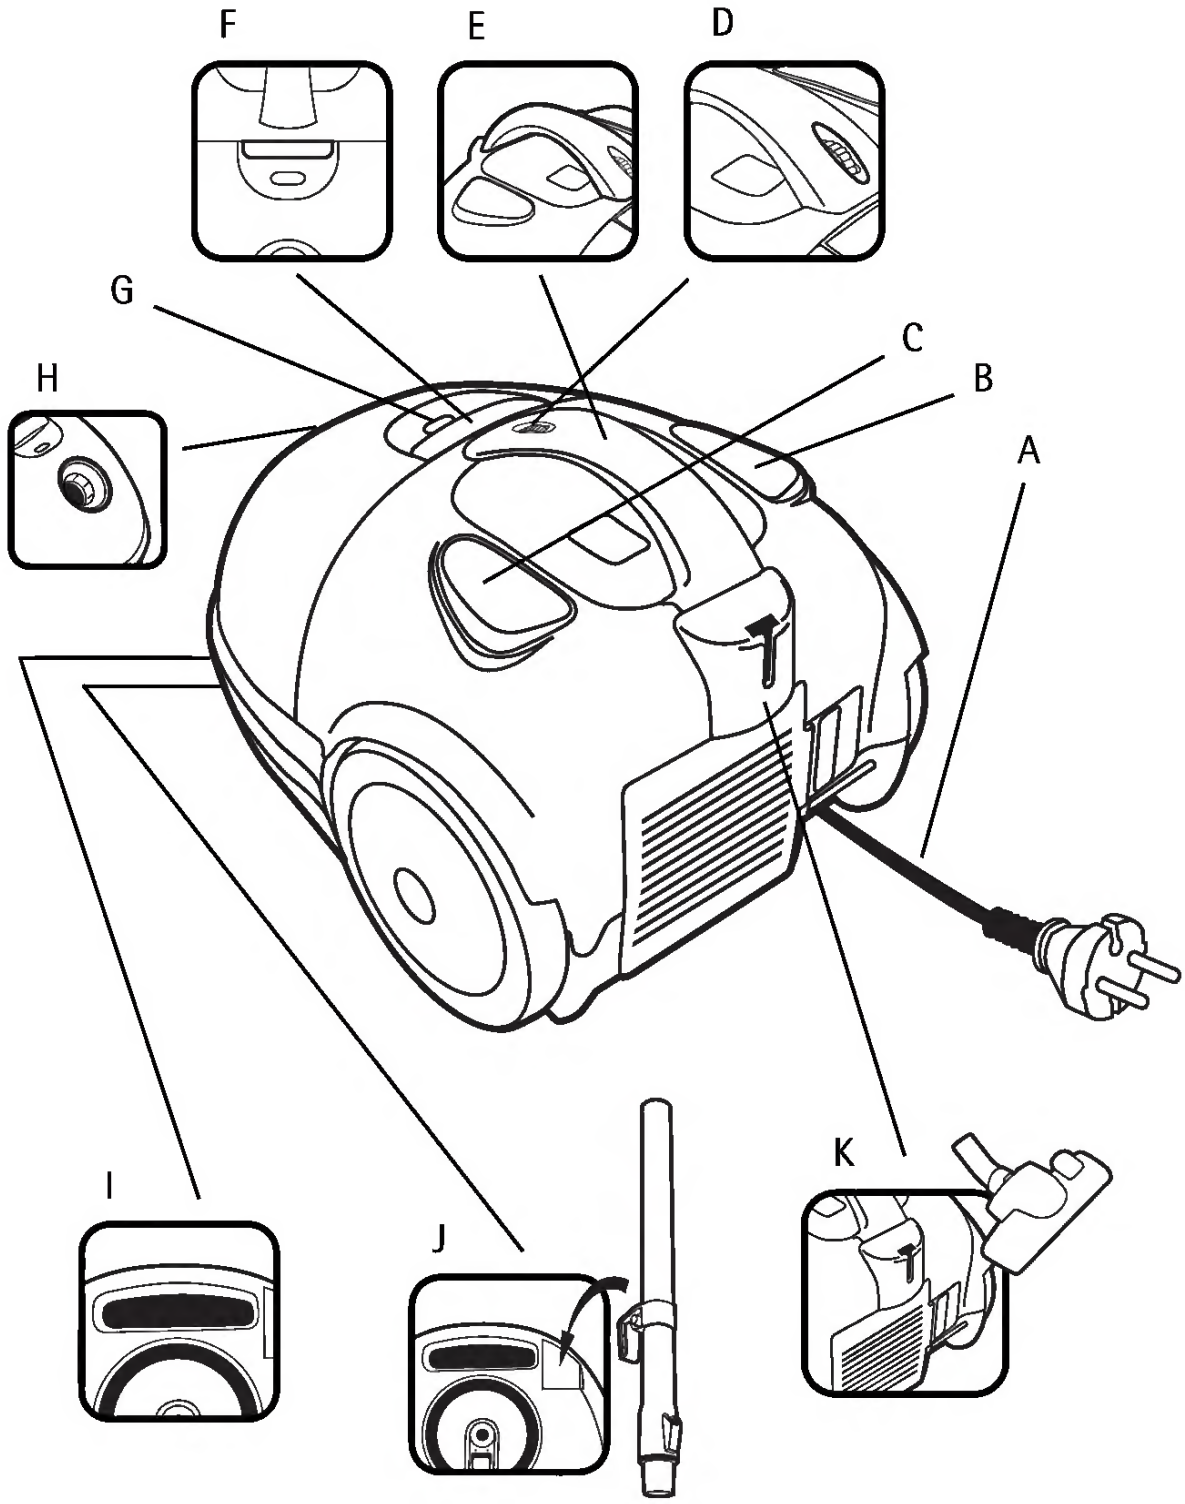

Downloaded from www.Manualslib.com manuals search engine

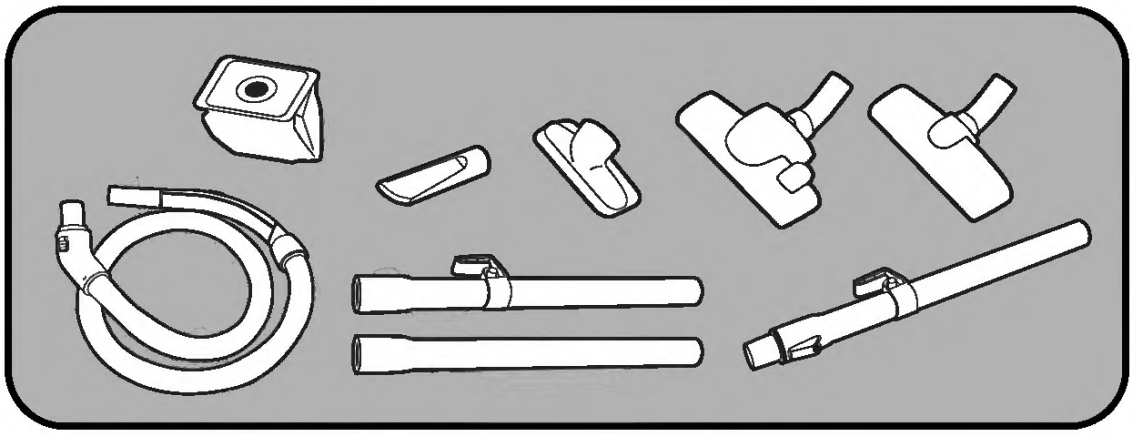

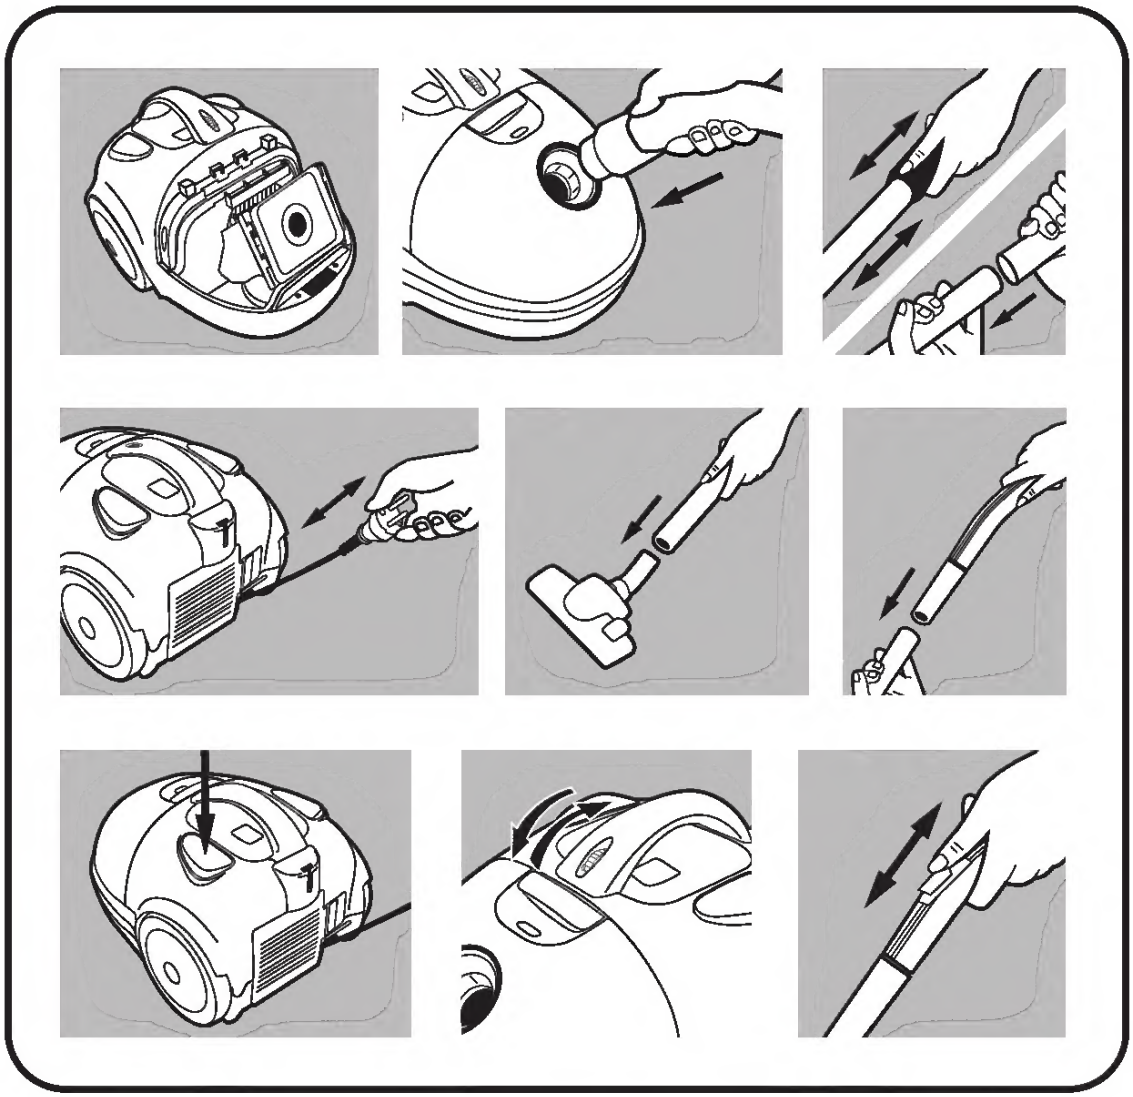

Downloaded from www.Manualslib.com manuals search engine

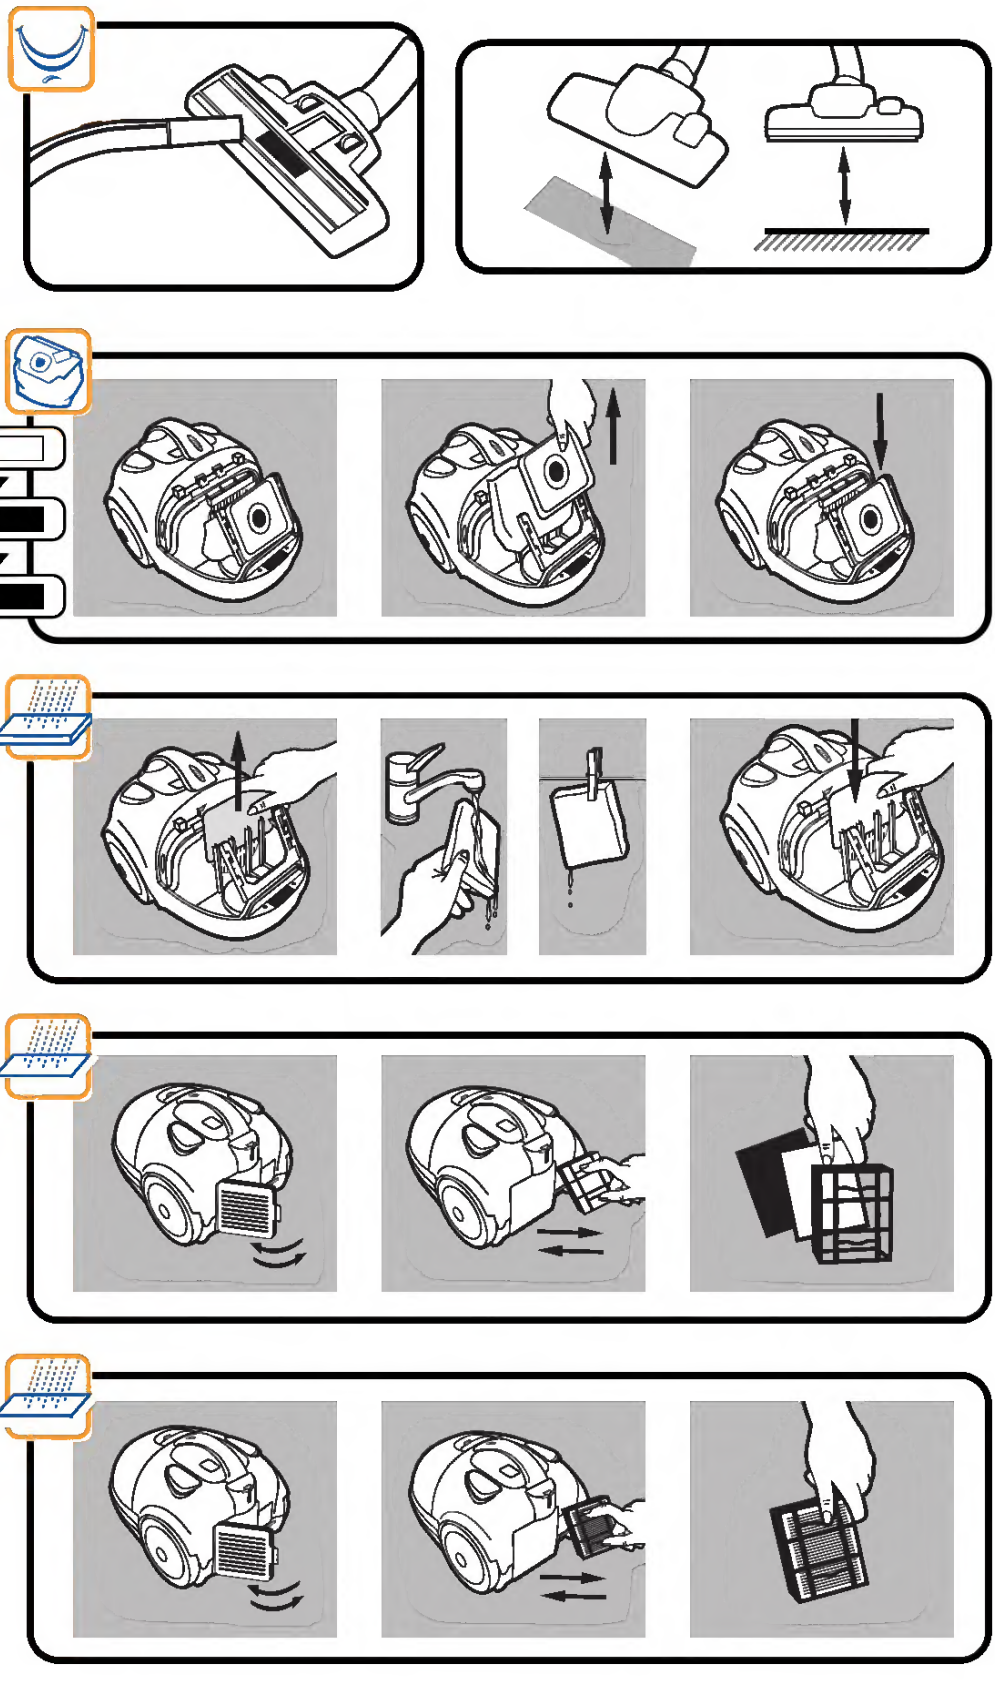

Downloaded from www.Manualslib.com manuals search engine

Dear Customer

Thank you for choosing an AEG SMART cleaner. To ensure total satisfaction, read this Instruction book carefully.

Features (see page 3)

A Mains cable
B Cable rewind button
C On/off button
D Suction control (306;350;360;366)
E Multifunction handle
F Cover release catch for dustbag compartment
G Dustbag indicator
H Hose connection
I Carrying Handle
J Storage slot for floor nozzle and extention tubes when not in use
K Storage slot for floor nozzle and extention tubes when in use

Accessories (see page 4)

- Dust bags
- Extension tubes (x2) (300;301)
- Telescopic tube (306;350;360;366)
- Swivel hose and handle with manual suction control
- Combination carpet/hard floor nozzle (301;306;350;360;366)
- Floor nozzle (300)
- Narrow crevice nozzle (301;306;350; 360; 366)
- Upholstery nozzle (301;306;350;360; 366)

Safety instructions

The cleaner is for domestic use only and has been designed to ensure maximum safety and performance.

Please follow these simple precautions:

- The cleaner is double-insulated so it must not be earthed.
- The cleaner is only to be used by adults. Young children or infirm persons should be supervised to ensure that they do not play with the appliance.
- Always store in a dry place.
- Do not use to pick up liquids.
- Avoid sharp objects.
- Do not pick up hot cinder or lighted cigarette ends.
- Do not use near flammable gases.
- Avoid tugging on the mains cable and check cable regularly for damage.
- **Note: Do not use your cleaner with a damaged cable. If damaged the cable should be replaced at an AEG Service Centre.**
- The Plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- All service and repairs must be carried out by authorised **AEG** service staff.

Getting Started (see page 4)

☞ Check the dustbag is in place.

☞ Insert the hose until the catches click to engage. (Press catches inwards to release).

☞ Attach tubes or telescopic tube to the hose handle and floor nozzle by pushing and twisting together. (Twist and pull apart to dismantle).

☞ Extend the cable and connect to mains. The cleaner is fitted with cable rewind, ensure cable is not twisted before use. (Press foot pedal to rewind. **Note: Please hold the plug to prevent it striking you or the machine**).

☞ Press the On/Off button to activate the cleaner.

☞ To decrease/increase suction, turn the rolling wheel on the multifunction handle (306;350;360;366).

Suction can also be regulated on the hose handle by opening/closing the aperture.

Downloaded from www.Manualslib.com manuals search engine

Getting the best results (see page 5)

- **Carpets:** Use the floor nozzle with the lever in horizontal position.
- **Hard floors:** Use the floor nozzle with the lever in vertical position.
- **Loose rugs/curtains/lightweight fabrics:** Reduce the suction power. Use the floor nozzle for loose rugs and the upholstery nozzle for curtains, cushions etc.
- **Confined areas:** Use the crevice nozzle for crevices, corners and radiators.

Dustbag indicator and changing the dustbag (see page 5)

For peak performance the dustbag must be changed when full. If the dustbag should accidentally get broken in the cleaner, take cleaner to an AEG Service Centre for cleaning. Check the dustbag regularly and replace when necessary. The dustbag indicator window will gradually turn red when filling and completely red when full.
To check the dustbag, the cleaner must be switched on, with all attachments connected and off the floor.

The dustbag full indicator may signify that the bag is blocked (occasionally caused by very fine dust) which will cause loss of suction and may result in overheating. If this occurs change the dustbag even if it is not full.

To change the dustbag

☞ Release catch and swing back lid before removing the dustbag.

☞ Remove the dustbag.

☞ Insert new dustbag by fitting the bag slots over holders.

We recommend the dustbag is changed

- after using a carpet cleaning powder
- if there is a bad smell from the cleaner, then you should also change the filter
- **Note: Use only AEG original dustbags and filters (ref GR50).**

Dust bag safety device:

To avoid damaging the cleaner do not use it without a dustbag. A safety device is fitted which prevents the cover closing without a dustbag. Do not attempt to force cover shut.

Changing the filters (see page 5)

There are two filters inside your cleaner. Never use the cleaner without the filters in place.

To clean Motor Protection filter

The Motor Protection filter should be cleaned when dirty.

☞ Release catch, remove the lid and the filter.

☞ Wash the filter in warm water.

☞ Allow to dry and re-insert the clear filter. Close the lid.

To change Micro filter

The Micro filter should be changed with every fifth dustbag.

☞ Release catch, open the filter cover and remove filter with grill.

☞ Take the filter out of the grill.

☞ Insert new filter into the grill, put it back into the cleaner. Close the cover.

To change HEPA filter (366)

☞ Release catch, open the filter cover.

☞ Take the filter with grill out of the cleaner.

☞ Insert new filter with grill, and close the cover.

Downloaded from www.Manualslib.com manuals search engine

Troubleshooting

- **Power:** If the electric power does not come on, **disconnect from mains** and check plugs, cable and fuses where appropriate.
- **Blockages/dirty filters:** The cleaner may switch itself off in the event of a severe blockage or excessively dirty filter(s). In such cases, disconnect from mains and allow to cool for 20-30 minutes.
  Clear blockage and/or replace filter(s) and restart.
  The clearing of blocked hoses is not covered by the guarantee.
  Please also see AEG additional information towards the back of this booklet.
- **Water:** If water is sucked into the cleaner the motor must be changed at an AEG Service Centre.

Downloaded from www.Manualslib.com manuals search engine

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

http://www.aeg-hausgeraete.de

© Copyright by AEG

3302 02 06 04

From the Electrolux Group.
The world's No.1 choice.

Downloaded from www.Manualslib.com manuals search engine